## **INSTALLATION INSTRUCTIONS**




Thoroughly read all instructions before commencing installation



Cut track to width of opening.

Drill **3.6mm diameter** holes, **25mm** from either end of the track along the centre line as shown.


Drill another **3.6mm diameter** hole **300mm** from the end of the track, along the center line.

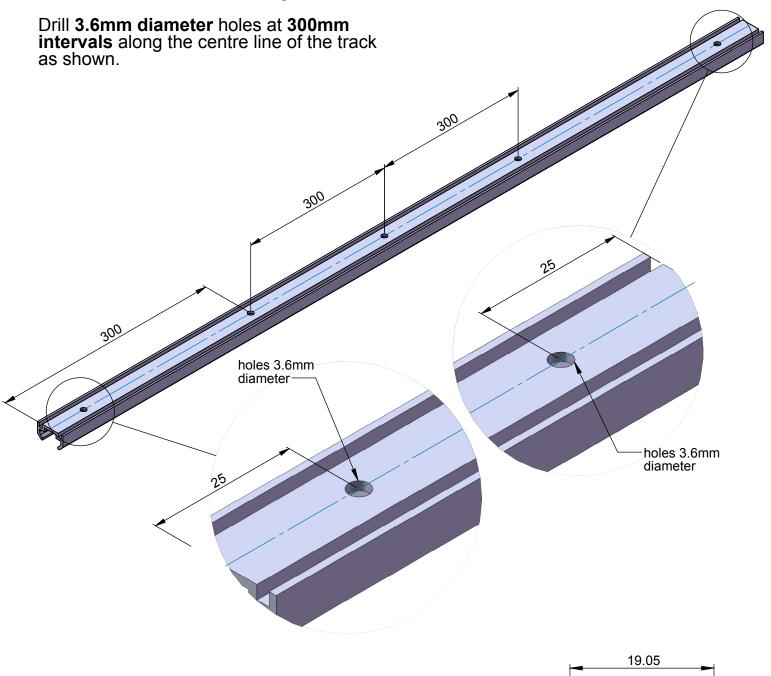

The **number of holes** will depend on the length of the track.


9.53


Centre line

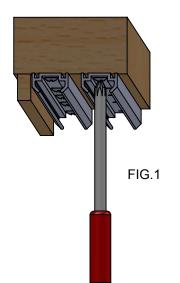

Fix track with No.6 x 5/8" round head screws into position as shown in fig.1.


Screw the **nylon gliders** to the top of the door at equal distance from both ends using **No.8 x 1" woodscrews** as shown in fig.2. Avoid screwing into the end grain.

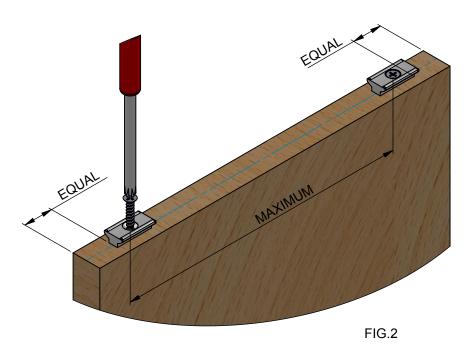


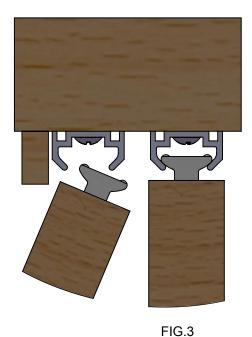


Hook door into track hanging rear door first, see fig.3.

Ensure that the doors are plumb before screwing the **nylon guides** into place using **No.5 x 1/2"** woodscrews as shown in fig.4.

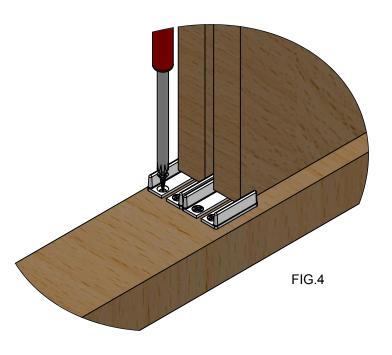

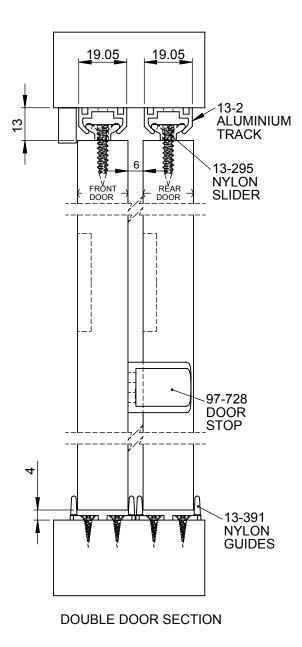

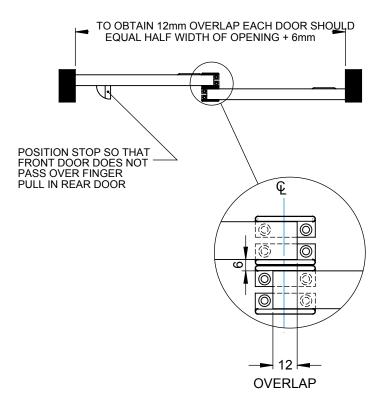

Fit the door stop in position so that the front door does not pass over the finger pull in the rear door.